

Zippie IRIS User Wheel Lock Setup



No-Go
Setup Not Available
*Forward
Rearward
Short Rearward

Long Push to Lock Wheel Lock Position

Rear Wheel Size	12	Roller Pos	Axle Pos						
			11	12	13	14	15	16	17
		1		2	1	1			
		2			2	1	1	1	
		3		3	2	2	1	1	1
	4			3	2	2	1		
	5				3	2	2		
	16	Roller Pos	Axle Pos						
			11	12	13	14	15	16	17
		1	1*		2	2			
		2		1*	3	2	2	1	
		3		1*	1*	3	2	2	1
	4			1*	1*	3	2		
	5				1*	1*	3		
	20	Roller Pos	Axle Pos						
			11	12	13	14	15	16	17
		1	2*	2*	1*				
		2		2*	2*	1*		3	
		3		3*	2*	2*	1*	1*	3
	4			3*		2*	1*		
	5				3*	2*	2*		
	22	Roller Pos	Axle Pos						
			11	12	13	14	15	16	17
		1	3*	2*	2*	1*			
		2		3*	2*	2*	1*	1*	
3			3*	2*	2*	1*	1*	3	
4			3*	3*	2*	2*			
5				3*	3*	2*			
24	Roller Pos	Axle Pos							
		11	12	13	14	15	16	17	
	1	3*	3*	2*	2*				
	2		3*	3*	2*	2*	1*		
	3		3*	3*	2*	2*	1*	1*	
4			3*	3*	3*	2*			
5				3*	3*	3*			



Wheel Lock Orientation - Forward



Wheel Lock Orientation - Rearward

Wheel Lock Clamp Upward Position

Wheel Lock Clamp Downward Position

Notes:

* When Axle Plate Orientation is in 1-4 (ENG1036), install wheel lock clamp in upward position

* When Axle Plate Orientation is in 5-8 (ENG1036), install wheel lock clamp in downward position

Zippie IRIS User Wheel Lock Setup



No-Go		Short Rearward Push to Lock Wheel Lock Position								
Setup Not Available										
*Forward										
Rearward										
Short Rearward										
Rear Wheel Size	12	Roller Pos	Axle Pos							
			11	12	13	14	15	16	17	
		1	3							
		2		3						
		3								
	4									
	5									
	16	Roller Pos	Axle Pos							
			11	12	13	14	15	16	17	
		1		3						
		2								
		3								
	4									
	5									
	20	Roller Pos	Axle Pos							
			11	12	13	14	15	16	17	
		1				3				
		2					3			
		3								
	4									
5										
22	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
4										
5										
24	Roller Pos	Axle Pos								
		11	12	13	14	15	16	17		
	1									
	2									
	3									
4										
5										

