


Jay Care Cushion Measuring Guide

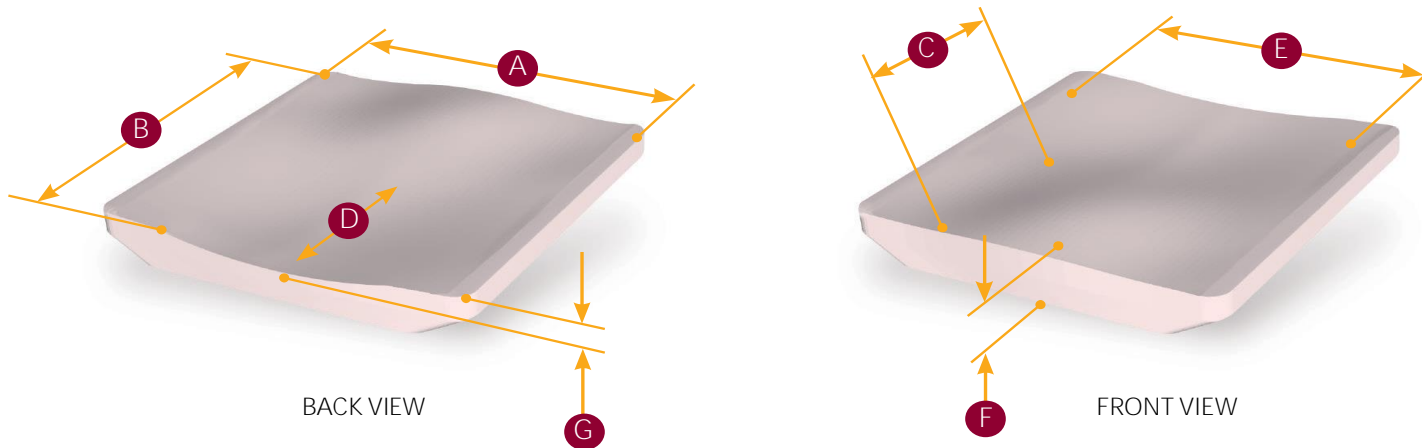

PART NUMBER	CHAIR SIZE	ACTUAL WIDTH	ACTUAL LENGTH	FEMORAL SUPPORT LENGTH	PELVIC CONTOUR DEPTH	PELVIC CONTOUR WIDTH	OVERALL HEIGHT	UNLOADED WELL DEPTH
		A	B	C	D	E	F	G
3100B	18 x 16	18.75	17.50	6.00	8.00	17.0	3.75	3.1
3101B	18 x 18	18.75	19.75	7.50	9.00	17.0	3.75	2.9
3105B	16 x 16	16.75	17.75	6.25	8.00	15.0	4.00	2.9
3106B	16 x 18	16.75	19.75	7.00	9.00	15.5	4.00	2.9
3109B	20 x 18	20.75	17.5	6.50	7.75	19.5	3.75	3.1

All listed measurements are in inches